

INSTRUCTIONS FOR USE
Odyssey Mk2 Fire Amber & White

GENERAL INSTRUCTIONS

Remove the fire from the packing, checking that neither the fire nor the power cable has been damaged during transport. Do not operate the heater if damaged. The accessories are found in a box that is packed at the side of the fire.

INSTALLATION OF THE FIRE

The inset dimensions are depth 15.5cm, height 66cm and width 60cm.

To prevent the fire from being pulled over it must be secured into place. In the instruction pack there will be two sets of four screws. The 20mm cross head self-tapers are for securing the fire into a Flamerite fireplace suite. The 20mm flat head screws and black rubber expansion nuts are for securing into a standard fireplace either through marble or directly into a wall.

1. **When fitting the fire into a Flamerite fireplace suite**, place the fire evenly into the hole and mark off through and at the **TOP** of each keyhole slot where on the back panel the screws are to go in. You may either screw the self-tapers directly into the MDF back panel or use a 2.5mm drill bit to start the hole. We recommend you drill no deeper than approx 5mm.
2. **When fitting as a hole in the wall**, place the fire evenly into the hole and mark off through and at the **TOP** of each keyhole slot where on the wall the expansion nuts are to go in. A 9.5mm hole is required and we recommend the use of a 2.5mm drill bit to start the hole. Remove the fire and drill the holes. Push the expansion nuts into each hole.

You may either place fire back into the hole and secure into place using the screws provided or leave the fire out and tighten the screws so they are approx 3mm away from the back panel. Line up the larger parts of each keyhole slot with each of the four screw heads and carefully push the fire down and into place. Tighten each screw and reattach the frame.

3. **When fitting as a Hang on the Wall**, be sure to take into account the distance from the fixed hanging rail at the top, to the bottom of the fire when judging the distance you would like your fire to hang from the floor. Simply mark off the holes through the wall rail, drill, fit raw plugs and fix with screws provided into place. The fire can now be easily hung.

A key feature of this fire is the enclosed effect area with no visible heat source. Therefore the fire will sit slightly away from the wall as to help it draw in the necessary air to enable the flame effect and heater to work properly. Where the inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire. Where a chimney is not blocked off sufficiently it will cause the heater to cut out and the flame effect to stop or work poorly.

IMPORTANT: The fire must be positioned so that the plug socket is accessible once the fire has been installed. In the unlikely event of breakdown access must be allowed for so that the fire maybe be serviced. This involves the fire being moved forward in order to access the rear. The mains cable must therefore be long enough to allow this. If the removal of the plug is absolutely necessary for installation, cut off in an area within 100mm only of the plug itself. Any further will affect you warranty.

Electrical connections

Your appliance comes fitted with a plug that incorporates a 13A fuse. The replacement fuses must be 13A and ASTA approved. If the fuse cover is lost the plug must not be used until a replacement cover, of the same colour, is obtained an electrical retailer.

The appliance is fitted with a moulded plug if it is necessary cut off the plug, for any reason, it must be discarded immediately with the fuse removed. Under no circumstances should any attempt be made to reuse the plug, do not insert into any 13A socket as this could cause a hazard.

WARNING THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code.

Green and yellow:	EARTH
Blue:	NEUTRAL
Red:	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings in your plug proceed as follows: -

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E, or coloured green or coloured green and yellow, or marked with the earth symbol

The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter N, or coloured black.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter L, or coloured red.

If the mains cable is damaged it must be replaced by the manufacturer or an authorised technical service centre.

Fuel effect (pebbles, lava rock, woodland or driftwood)

Once the fire has been installed in the correct position unpack the fuel effect from the accessory box, open the front door and add the fuel effect by simply placing them on the visible tray around the curved screen.

OPERATING THE FIRE

Controls

The fire may only be operated by the remote control. There is a standby **on/off** reset switch behind the door. This is marked with **I/O** and will need to be switched to **I** (the lights will flicker once) operate the remote.

The standby on/off reset switch is there for your safety and piece of mind. In the O position (off) you will be unable to operate the fire from the remote handset. We recommend always turning the fire off from here after use and storing the remote in safe place out of the reach of children. If for any reason the remote becomes lost or damaged while the fire is on, switching to off (position O), waiting 30 seconds and switching back on (position I) will reset the fire back to its standby state. For details on replacing your remote, see supplier or call Flamerite customer services direct.

To turn the fire on, simply press and release the **FIRE ON** or  button on the remote keypad.

To set the light to your desired brightness, press then release the button marked **DIMMER** or . You will notice the flame effect brightness will continuously phase from high to low. At the desired point press then release the **DIMMER** or  button to stop the phasing.

For heating the fire must be switched on. To give 1kw of heat, press then release the button marked **ON/OFF HEAT** or  **O/I**. To increase the temperature to 2kw press then release button marked **HI/LO** or  **I/II**. You may change from 1 to 2kw or 2 to 1kw by pressing **HI/LO** or  **I/II** at anytime. To turn the heater off, press then release the button marked **ON/OFF HEAT**  **O/I**. The heater will always start with 1kw

To turn the fire off press then release the button marked **FIRE OFF** or 

Areas around the front of the fire will become hot when the heater is activated. We strongly recommend small children be kept away from having any direct contact with the appliance by means of fitting a fireguard.

Automatic safety cut out

The heater is fitted with an automatic cut out to prevent any damage due to overheating. The heater will automatically cut out if the airflow is obstructed. Never cover the air inlets or outlets. To reset the fire, switch the fire off, remove the cause of overheating and allowed to cool for a suitable period then switch the fire back on.

MAINTENANCE

Before any maintenance/cleaning is undertaken always disconnect the fire from the mains power supply.

Replacing light bulbs

Replacements are available from Flamerite Fires stockists, good lighting, super markets or large DIY stores.

To change the flame effect clear 40watt bayonet light bulbs allow a suitable time to cool. Open the front door (as described in **Controls**) remove then replace the blown light bulb and close the door. Please note that replacement bulbs are not covered by the guarantee of the product.

Changing battery in the remote

On the reverse side of the remote near the bottom is the access plate to the battery compartment. Remove by placing your nail under the catch, push and lift. We only recommend an alkaline battery MN21 12 Volt. Ensure battery is disposed of safely. Do not dispose of in fire, do not swallow and keep away from children.

Cleaning

The fire can be cleaned with a soft cloth and non-abrasive cleaner.

WARNINGS

- Do not use the fire in the vicinity of a bath shower or swimming pool.
- Never use the fire to dry laundry.
- Never install the fire directly underneath a fixed main socket.
- Never cover the appliance during the operation of the fire.
- The use of an extension lead is not recommended.
- Particular caution should be applied to ensure that children do not play with the marbles/coal.
- As with any electrical appliance whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.

PROBLEM SOLVING

No power to the fire

Check the wall socket, plug and fuse.

No illumination

The bulbs should flicker once when the standby on/off reset switch is turned to the on (I) position. If so, there is power to the fire, check remote.

Remote will not work.

Check fire is set to on (I). On the back of the handset is a dial. Turn the dial either way one click and press the Fire On button each time until illumination. If after checking all 16 frequencies (from A . C . E . G and so on to P) there is still no illumination check battery.

Heater cuts out continually

The safety cut has operated see note on operating the Fire. Where the inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire. Where a chimney is not blocked off sufficiently it will cause the heater to cut out and the flame effect to stop or work poorly.

Loud humming noise when illuminated

Due to moving parts, the electric fire will make a noise. This may vary slightly. For a comparison it may be necessary to visit your local dealer. **Important: your home is quieter than a busy store.**

Noise from the heater when in use

Same as above. As well as a slight humming noise the sound of rushing air will be apparent. Both are normal.

Your fire is guaranteed for one year from the date of purchase. In the unlikely event of a breakdown you have access to our customer services team simply call **01543 251122** during office hours, 9am - 5pm.



User Manual
Notice d'utilisation

2
18

USER MANUAL

Oven
Four

ZOB31301

ZANUSSI

Contents

Safety information.....	2	Additional functions.....	7
Safety instructions.....	3	Hints and tips.....	7
Product description.....	5	Care and cleaning.....	13
Before first use.....	5	Troubleshooting.....	14
Daily use.....	5	Installation.....	15
Clock functions.....	6	Energy efficiency.....	16
Using the accessories.....	6		

Subject to change without notice.

Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages.

Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.

General Safety

- Only a qualified person must install this appliance and replace the cable.

- Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Before maintenance cut the power supply.
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

Safety instructions

Installation



WARNING!
Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not pull the appliance by the handle.
- Keep the minimum distance from the other appliances and units.
- Make sure that the appliance is installed below and adjacent safe structures.
- The sides of the appliance must stay adjacent to appliances or to units with the same height.

Electrical connection



WARNING!
Risk of fire and electrical shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.

- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Do not let mains cables touch or come near the appliance door, especially when the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- This appliance complies with the E.E.C. Directives.

Use

! WARNING!
Risk of injury, burns and electrical shock or explosion.

- Use this appliance in a household only.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

! WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put ovenware or other objects in the appliance directly on the bottom.
 - do not put aluminium foil directly on the bottom of the appliance.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.

- Discoloration of the enamel has no effect on the performance of the appliance. It is not a defect in the sense of the warranty law.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Always cook with the oven door closed.

Care and cleaning

! WARNING!
Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Service.
- Be careful when you remove the door from the appliance. The door is heavy!
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Remaining fat or food in the appliance can cause fire.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, obey the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

Internal light

- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.

! WARNING!

Risk of electrical shock.

- Before replacing the lamp, disconnect the appliance from the power supply.
- Only use lamps with the same specifications.


Disposal

! WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

Product description

General overview

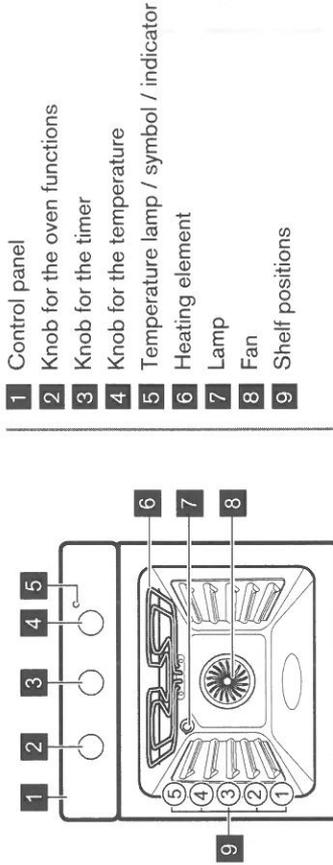

Accessories

- **Wire shelf**
For cookware, cake tins, roasts.
- **Grill- / Roasting pan**
To bake and roast or as pan to collect fat.

• Trivet

For roasting and grilling.



Use the trivet only with the Grill- / roasting pan.

Before first use

! WARNING!
Refer to Safety chapters.

Initial Cleaning

Remove all accessories from the appliance.

i Refer to "Care and cleaning" chapter.

Clean the appliance before first use. Put the accessories back to their initial position.

Preheating

Preheat the empty appliance to burn off the remaining grease.

Daily use

! WARNING!
Refer to Safety chapters.

1. Set the function and the maximum temperature.

2. Let the appliance operate for 1 hour.

3. Set the function and the maximum temperature.

4. Let the appliance operate for 15 minutes. Accessories can become hotter than usual. The appliance can emit an odour and smoke. This is normal. Make sure that the airflow in the room is sufficient.

- To prevent too much smoke in the oven during roasting, add some water into the deep pan. To prevent the smoke condensation, add water each time after it dries up.

Initially, monitor the performance when you cook. Find the best settings (heat setting, cooking time, etc.) for your cookware, recipes and quantities when you use this appliance.

Cooking times

Cooking times depend on the type of food, its consistency, and volume.

Baking and roasting table

Cakes

Food	True Fan Cooking		Time (min)	Comments
	Temperature (°C)	Shelf position		
Whisked recipes	160	3 (2 and 4)	45 - 60	In a cake mould
Shortbread dough	160	3 (2 and 4)	20 - 30	In a cake mould
Buttermilk cheese-cake	165	2	60 - 80	In a 26 cm cake mould
Apple cake (Apple pie) ¹⁾	160	2 (left and right)	80 - 100	In two 20 cm cake moulds on a wire shelf
Strudel	150	2	60 - 80	In a baking tray
Jam-tart	165	2 (left and right)	30 - 40	In a 26 cm cake mould
Sponge cake	160	2	50 - 60	In a 26 cm cake mould
Christmas cake / Rich fruit cake ¹⁾	150	2	90 - 120	In a 20 cm cake mould
Plum cake ¹⁾	160	2	50 - 60	In a bread tin
Small cakes - one level	140 - 150	3	20 - 30	In a baking tray
Small cakes - two levels	140 - 150	2 and 4	25 - 35	In a baking tray
Small cakes - three levels	140 - 150	1, 3 and 5	30 - 45	In a baking tray
Biscuits / pastry stripes - one level	140 - 150	3	30 - 35	In a baking tray
Biscuits / pastry stripes - two levels	140 - 150	2 and 4	35 - 40	In a baking tray

Food	True Fan Cooking		Time (min)	Comments
	Temperature (°C)	Shelf position		
Biscuits / pastry stripes - three levels	140 - 150	1, 3 and 5	35 - 45	In a baking tray
Meringues - one level	120	3	80 - 100	In a baking tray
Meringues - two levels ¹⁾	120	2 and 4	80 - 100	In a baking tray
Buns ¹⁾	190	3	12 - 20	In a baking tray
Eclairs - one level	170	3	25 - 35	In a baking tray
Eclairs - two levels	170	2 and 4	35 - 45	In a baking tray
Plate tarts	170	2	45 - 70	In a 20 cm cake mould
Rich fruit cake	150	2	110 - 120	In a 24 cm cake mould
Victoria sandwich	160	2 (left and right)	50 - 60	In a 20 cm cake mould


¹⁾ Preheat the oven for 10 minutes.

Bread and pizza

Food	True Fan Cooking		Time (min)	Comments
	Temperature (°C)	Shelf position		
White bread ¹⁾	190	1	60 - 70	1 - 2 pieces, 500 gr per piece
Rye bread	180	1	30 - 45	In a bread tin
Bread rolls ¹⁾	180	2 (2 and 4)	25 - 40	6 - 8 rolls in a baking tray
Pizza ¹⁾	230 - 250	1	10 - 20	In a baking tray or a deep pan
Scones ¹⁾	190	3	10 - 20	In a baking tray

¹⁾ Preheat the oven for 10 minutes.

**OPERATING AND INSTALLATION
INSTRUCTIONS**

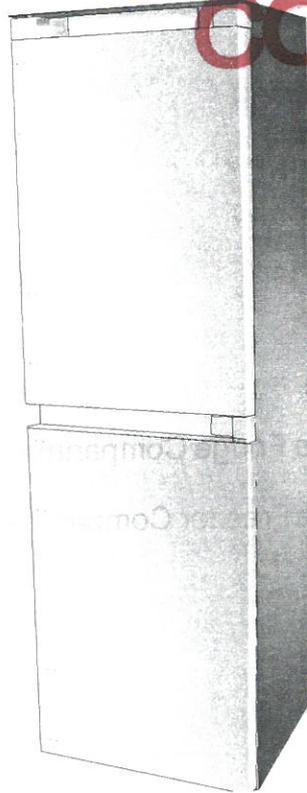


APM6852 - 50:50 Fridge Freezer

•COMBINED REFRIGERATOR/FREEZER•

START-UP AND OPERATION

- Connect the plug to the mains
- The internal light comes on automatically when the door is opened.
- The warning lamp 'B' comes on to indicate that the refrigerator is operating.
- Regulate the temperature of the refrigerator by adjusting the knob 'C' from position 1 (warmest) to 5 (coldest)
- The appliance can be turned off by setting the knob 'C' to the '0' position.


Note: Lamp 'A' is the SUPER function lamp, please see page 14 for details.

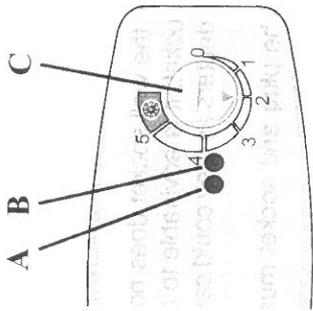

How to Store Food in the Refrigerator Compartment

Place the food as shown in the diagram below, but please note:

- Do not place food in contact with the rear wall of the refrigerator as air must be allowed to circulate freely inside the refrigerator.
- Do not place food that is still warm in the refrigerator.
- Keep liquids in closed containers.

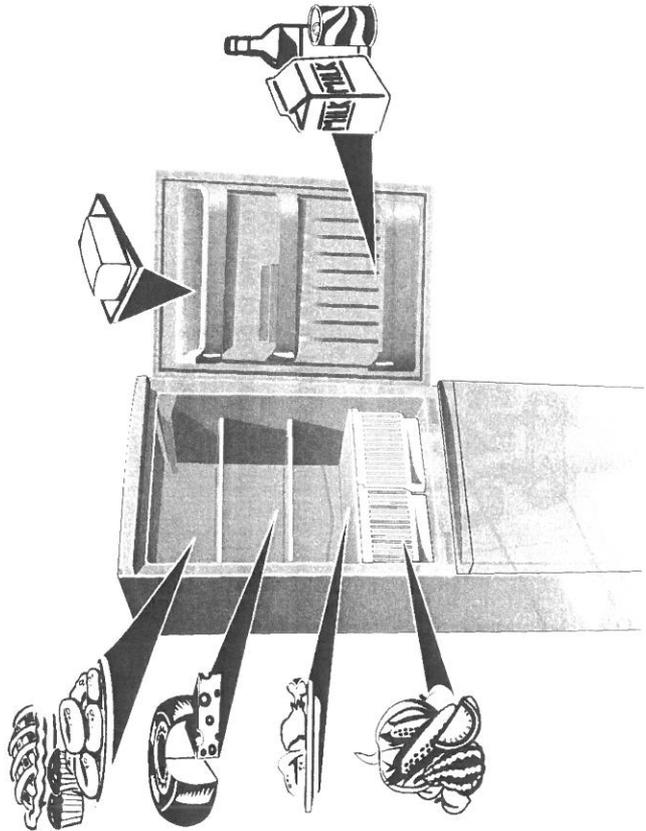


REGULATIONS, WARNINGS AND IMPORTANT INFORMATION

This product is in conformity with the European safety regulations in force relative to electrical equipment. It has undergone extensive trials and meticulous tests to evaluate safety and reliability.

Improper use can be dangerous, especially for children. Before connecting the appliance, check that the data on the plate corresponds to that of your system. Please be sure to take the recyclable packaging material to a waste disposal plant for recycling.

Some fundamental rules must be observed in the use of this appliance, as with any electrical equipment:

- do not pull on the power supply cable to pull the plug from the socket
- do not allow children to use the appliance without supervision
- do not pull out or insert the plug with wet hands
- before carrying out any cleaning or maintenance work, disconnect the appliance from the mains by switching off the main switch and removing the plug.
- in case of breakdown or improper functioning switch off the appliance and do not tamper with it.

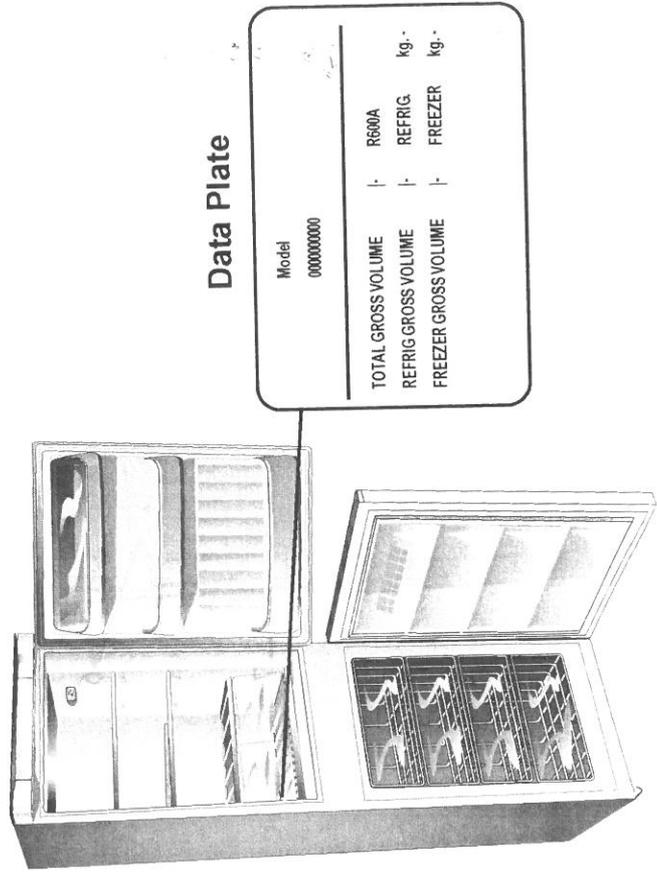

Data Plate

Model
000000000

TOTAL GROSS VOLUME	l	R600A	kg
REFRIG GROSS VOLUME	l	REFRIG.	kg
FREEZER GROSS VOLUME	l	FREEZER	kg

TROUBLESHOOTING

- 1) **The appliance is not working**
 - Is there a power failure?
 - Is the plug inserted correctly into the mains socket?
 - Is the supply cable damaged?
 - Is the thermostat set in the '0' position?
- 2) **The temperature inside the compartments is not low enough**
 - Do the doors close correctly?
 - Is the appliance installed near a source of heat?
 - Is the thermostat set in the correct position?
- 3) **The temperature in the refrigerator compartment is too low**
 - Is the thermostat set in the correct position?
- 4) **The appliance is too noisy**
 - Is the appliance touching other pieces of furniture or objects?
 - Are the tubes at the back touching each other or do they vibrate?
 - Is the appliance on a level?
- 5) **The interior light does not work**
 - First check point 1, then: **LAMP REPLACEMENT.**
 - Disconnect the appliance from the mains supply.
 - Remove the cover from the light bulb.
 - Check the light bulb and -if necessary- replace it with a new one (don't use a bulb of more than 25 W). Replace cover.








DISPOSAL OF THE APPLIANCE

WARNING! Do not damage the refrigerant circuit.

This appliance uses cooling gas R600a isobutane, and inflammable gas inside the insulating foam.

In order to protect the environment, at the end of the functional life of the appliance, it must be decommissioned professionally and disposed of safely. For this operation contact your dealer or the local authorities

CABINET DIMENSIONS & VENTILATION REQUIREMENTS

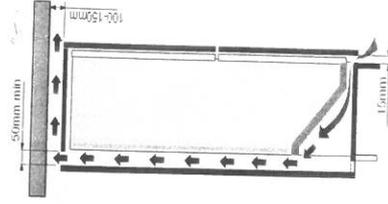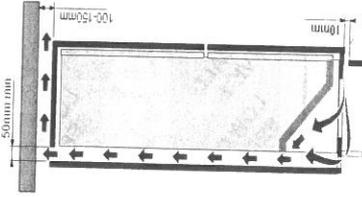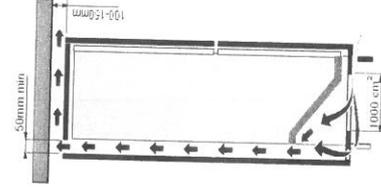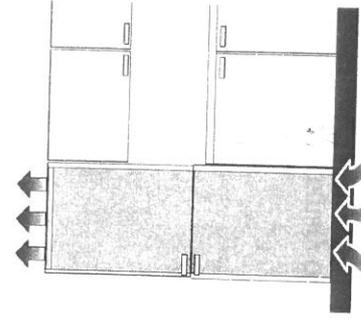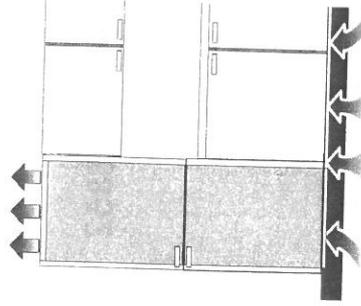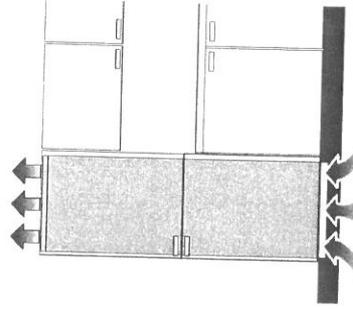
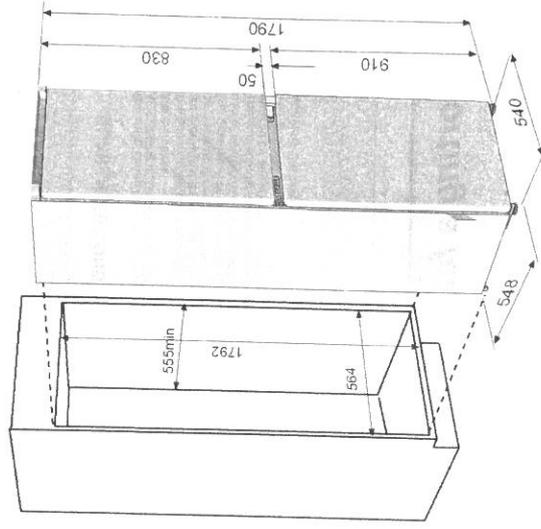


FITTING BATTERIES IN YOUR REMOTE CONTROL

First open the battery cover on the underside of the remote control. Fit both batteries 1.5Volt (R03/AAA) referring to the imprinted symbols (+/-) in the battery case and put on the battery cover again.

While using the remote control, direct it towards the front of the DVD player. If the remote control does not work or the chosen function could not be made, the batteries are most probably exhausted and they should be replaced as soon as possible. Please use only leak proof batteries. If you will not be using your remote control for a long time, it is recommended to take out the batteries from your remote control.

REMOTE CONTROL FUNCTIONS

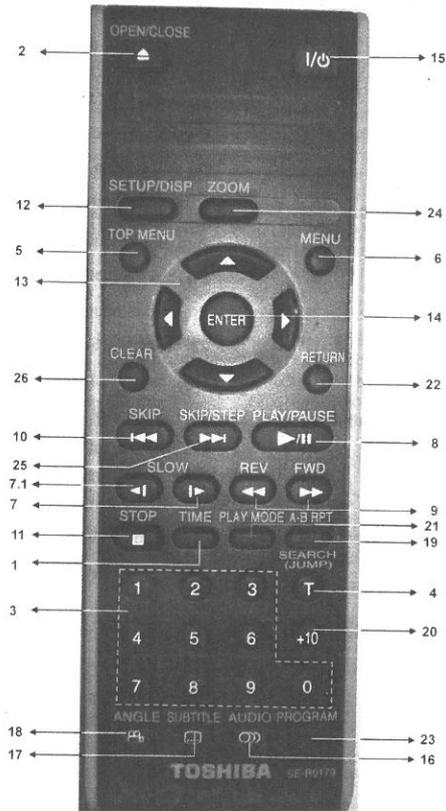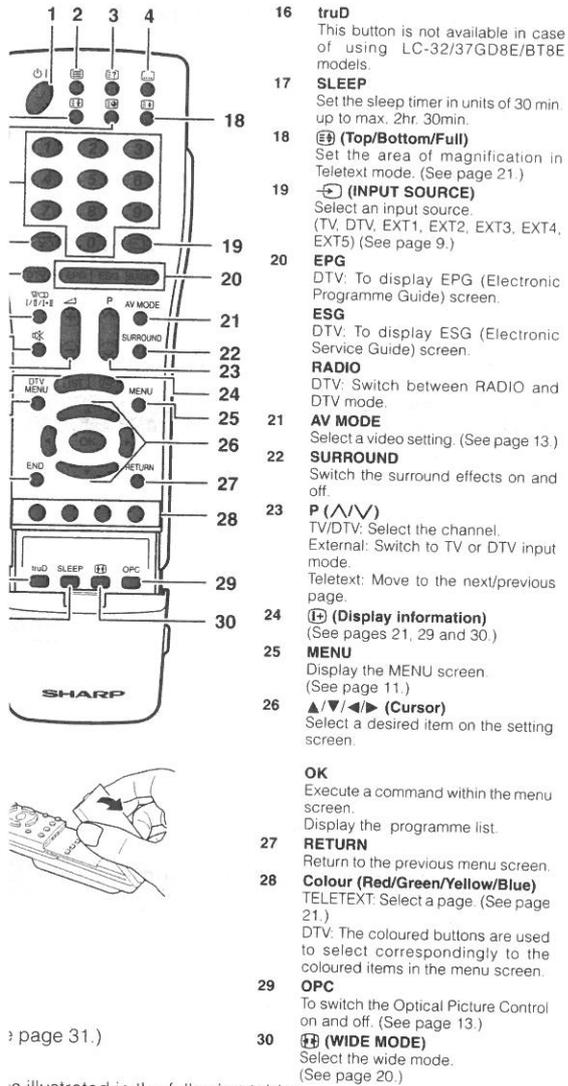

is illustrated in the following tables.


roadcasts selection

Selectable items
STEREO, MONO
CH A, CH B, CH AB
MONO

ay "MONO".

- lay mode of the disc,
d front panel display
13. **Arrow buttons**
Move to the items or settings.
14. **ENTER button**
Executes the items or settings.
15. **ON/STANDBY button**
Turns the unit on or switches the unit to standby mode.
- title/time numbers
16. **AUDIO button**
Changes the language of the sound while playing a DVD/ VCD.
- arch (title, chapter,
17. **SUBTITLE button**
Changes the language of the subtitle while playing a DVD.
- / screen or changes
or VCD and SVCD
18. **ANGLE button**
Changes the angle when playing a DVD disc recorded with multiple angles.
- 1 screen.
19. **A - B RPT button**
Repeat playback between point A and point B.
- ton
- v playback.
20. **+10 button**
For the track/chapter numbers which are greater than "9", use +10 button. Press this button once and then enter the two digit track/ chapter number.
21. **PLAY MODE button**
Press to execute disc/title/chapter repeat.
- DVD title that has
s button functions
led item) in the root
g of "Play/Pause"
prohibited by the
22. **RETURN button**
Returns to the preceding selection screen.
23. **PROGRAM button**
Press to list all the files of MP3, MPEG, JPEG and DivX®.
24. **ZOOM button**
Zooms the picture.
- verse playback at
ck (fast forward/
25. **SKIP/STEP button**
Press to go to the next chapter or track during playback and next frame during pause.
- previous chapter
26. **CLEAR button**
Using this button, you can delete the mistyped entries or cancel some functions.
- s or set-up menu

FRONT PANEL FUNCTIONS

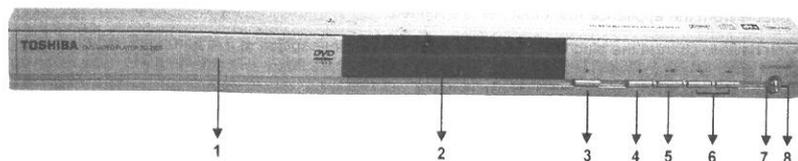

1. Disc Tray

Place a disc on the tray.

2. Front Panel Display (VFD)

Indicates the playing time, title, chapter/track, etc.

3. OPEN/CLOSE (▲) button

Opens or closes the disc tray.

4. STOP button

Stops playing disc.

5. PLAY/PAUSE button

Plays/pauses the disc. For any DVD title that has a root menu with still picture, this button functions as "button select" (selects highlighted item) in the root menu. Otherwise this functioning of "PLAY/PAUSE" button on the root menu will be prohibited by the disc, and "⓪" will appear.

6. SKIP buttons

Press to go back to the preceding chapter/track or go to the next chapter/track.

7. Power on indicator

8. ON/STANDBY button

Turns the unit on or switches the unit to standby mode.

COPY

DIPLOMAT


How to get the most from your Dishwasher

Model: ADP8322

Product Specification

Number of place settings - 12
 Product Dimensions (mm) 595 w X 580 d X 840 - 890 h
 Supply Voltage 230 - 240 V, 50 Hz
 Supply Water Pressure 0.3 - 10 bar (0.03 - 1.0 MPa)

Know your Dishwasher

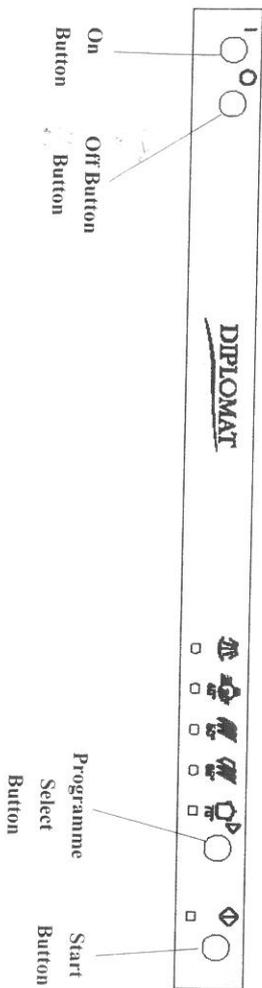

Start Button

Switches on when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Programme Selector

The following programmes can be selected:

Programme chart		Detergent ²⁾		Consumption ³⁾		
Programmes	Loading instructions	A	B	Litres	kWh	Minutes
Pre-Rinse	cold Crocery to be washed later.	-	-	5.0	0.02	10
Rapid	40°C Lightly soiled crockery with no dried-on food.	X	-	13.0	0.70	30
Normal ¹⁾	50°C Normally soiled crockery.	X	X	16.0	1.24	133
Normal	65°C Normally or heavily soiled crockery.	X	X	16.0	1.65	90
Intensive	70°C Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	17.0	1.90	125

1) Reference programme for energy label in compliance with European

EN 50242 regulations.

2) Programme data obtained in conformity with

standard EN 50242. Values may vary in relation to

usage, e.g. different loads, water temperature - above or below 15°C - as well as water hardness and power supply voltage, etc.

HOW TO USE THE DISHWASHER

Turn on the Water Supply Taps

Open the door

Check the Salt level
(see page 6)

Check the Rinse-aid level
(see page 7)

Load the Baskets
(see page 9)

Add detergent
(see page 8)

Switch on the Appliance

Select Programme
(see page 4)

Press Start Button

Close the Door

Only after the Start button has switched off remove Crockery and Cutlery

Switch off the electricity
and water supplies

To change the selected programme press start button for 2 secs, select new programme and press Start.


WARNING: Beware hot steam when opening the door

HOW TO FILL THE DETERGENT DISPENSER

We strongly recommend the use of separate detergent, rinse aid and salt products, this allows fine adjustment of each product.

Only use detergents recommended for use in domestic dishwashers. **Only fill the detergent dispenser prior to starting a wash programme**

- 1 Press button **C** to open the cover.
- 2 **How to fill the detergent dispenser.**

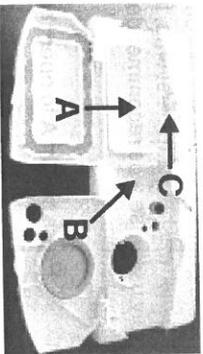

- Programmes with pre-rinse:
 - Powder and/or liquid detergent:
 - pour two thirds of the recommended dosage into the **compartment (A)**;
 - pour one third into the **compartment (B)**;
 - Tablets: Place a tablet in the **compartment (A)** and/or follow the directions on the detergent pack.
- Programmes without pre-rinse:
 - Powder and/or liquid detergent, tablets:
 - pour the entire recommended dosage into the **compartment (A)**;
- 3 Close the cover.

Detergent

Use good quality liquid or powder dishwasher detergents and/or tablets (**do not use hand dishwashing detergents**).

In order to safeguard the environment, follow the manufacturer's directions for use. Do not use more than the amount of detergent that is recommended. Observe the manufacturer's safety warnings. Keep these products out of reach of children.

If you use detergents in tablet form, follow the manufacturer's directions for use.

If you use multi-action dishwasher detergents that incorporate rinse aid and regeneration salt, follow the directions below:

Read the detergent's instructions carefully. If in doubt, contact the detergent manufacturer. The guarantee is not applicable if faults are caused by the use of these products.


Please note that 3 in 1 tablets are only suitable for use in certain water hardness areas.

Combined products (3 in 1; 2 in 1) are only full effective with certain programmes.

HOW TO LOAD THE DISHWASHER BASKETS


Upper Basket:

Crockery holders (A):
Depending on the position, for example plates, cups and long-stemmed glasses.

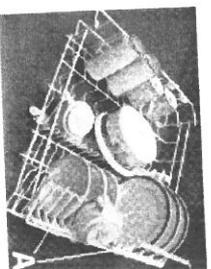


Lower Basket:

Plate holder (B).

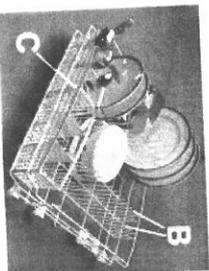

Cutlery basket (C):

The cutlery basket can be removed to increase available space.
Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

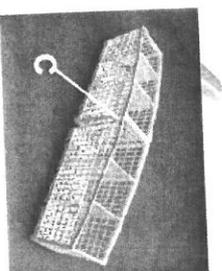

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

SOMETHING WRONG WITH YOUR DISHWASHER ?


If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem

Problem	Cause	Remedy
The appliance is not working	No water supply. The appliance does not load sufficient water. There is no power to the machine. Close the door.	Open the tap. Clean the water supply tap filter. Ensure there are no kinks in the water hose. Insert the plug into the mains socket. Press the Start Button. Check the fuse.
If crockery is not perfectly dry	Starting the selected programme. Insufficient rinse aid. Residual water in cavities.	The programme can be set to "0" to start. Increase dosage. Load crockery at an angle.
If crockery is not perfectly clean	The water jet does not reach the crockery. Insufficient detergent. Unsuitable programme. Spray arms blocked. Spray arm nozzles clogged.	Arrange crockery so that items do not touch each other. Load crockery upside down. Follow recommended detergent dosage. Select a more intense wash cycle. The spray arms must be able to turn freely. Remove any impurities obstructing the water flow. Use a good quality detergent.
Sandy or grainy residues	Incorrect detergent/detergent too old. Clogged filters. Filters incorrectly assembled.	Use a good quality detergent. Check filters regularly / if necessary clean. Insert the filter correctly.
Colour of plastic parts faded	Tomato/carrot juice, ... detergent with a greater whitening power.	Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery	Streaks on the crockery/glasses. Layer of salt on crockery/glasses.	Adjust the rinse aid dosage. Ensure the salt container lid is closed properly.
Opaque glasses / glasses not sparkling	Cannot be washed in the dishwasher. Not made of stainless steel.	Use suitable glasses Use suitable cutlery.
Rust on cutlery	The START indicator lamp flashes.	Ensure that the filter assembly is not clogged and if necessary clean it. Ensure that the water supply is turned on. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

INSTALLATION - ELECTRICAL CONNECTIONS

WARNING: THIS APPLIANCE MUST BE EARTHED

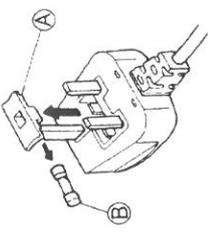

Fuse Replacement
If the mains lead of this appliance is fitted with a BS1363A 13 amp fused plug, to change the fuse use an A.S.T.A. approved fuse to BS1362 and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit a replacement 13 amp fuse into the fuse cover.
3. Refit the cover and fuse into the plug.

Important:
The fuse cover must be refitted when changing a fuse. If the fuse cover is lost the plug must not be used until a replacement cover has been obtained. Replacement fuse covers are available from your local electrical store.


If the plug supplied is not to be used please cut the mains cable and dispose of the plug safely. Your appliance must then be connected to fixed wiring via the use of a double pole switched fused spur outlet with at least 3mm contact separation, with a pilot lamp. (See technical data for fuse rating). We strongly recommend the appliance is connected by a qualified electrician who is a member of the N.I.C.E.I.C or Corgi who will comply with the I.E.E and any local regulations.

NOTE:
The terminology "DOUBLE POLE" means that both the live and neutral supplies are switched and disconnected at the same time.


The terminations labelled SUPPLY are for the connection for the internal house wiring and the terminations labelled LOAD are for connection for the appliance.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:-
Green / Yellow Earth
Blue Neutral
Brown Live
As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows:
The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the earth symbol \perp or coloured green or green and yellow.
The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.
The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

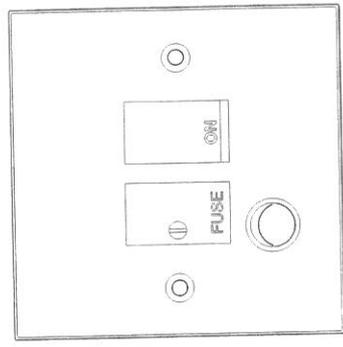

BLUE (NEUTRAL)
BROWN (LIVE)

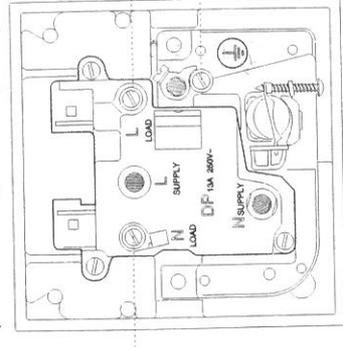

GREEN & YELLOW (EARTH)

**FUSE RATING:
13 AMP**

SAMSUNG

USER MANUAL

5 SERIES

Thank you for purchasing this Samsung product.


To receive more complete service, please register your product at www.samsung.com/register

Model _____ Serial No. _____

05 The TV Controller

Using the TV Controller

- The product colour and shape may vary depending on the model.
- You can turn on the TV with the **TV Controller** button at the bottom of the TV, and then use the **Control Menu**. The Control Menu appears when the button is pressed while the TV is On. For more information about its usage, refer to the figure below.

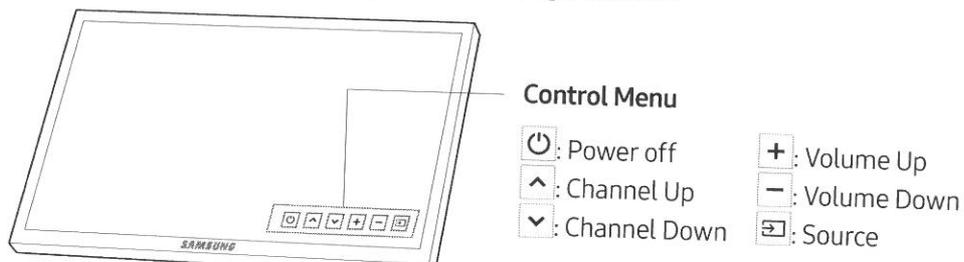

TV Controller / Remote control sensor

Press: Move

Press & Hold: Select


The **TV Controller** is placed at the bottom of the TV.

Contact SAM
 If you have a
 Country
 EIRE
 UK

The Remote Control

Learn where the function buttons are on your remote, such as: **SOURCE**, **MUTE**, **TTX/MIX**, **PRE-CH**, **CH**, **CH LIST**, **MENU**, **TOOLS**, **INFO**, **RETURN** and **EXIT**.

- This remote control has Braille points on the **Power**, **Channel**, **Volume**, and **Enter** buttons and can be used by visually impaired persons.

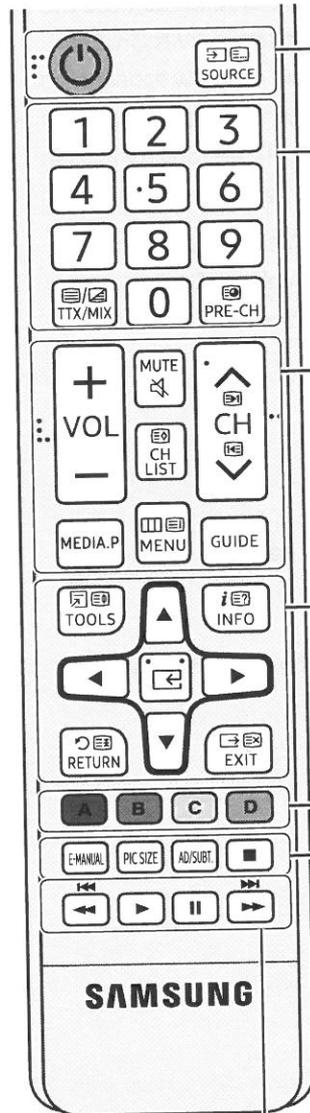


- ⏻ (Power)**: Turns the TV on and off.
- SOURCE**: Displays and selects available video sources.
- 1-9**: Gives direct access to channels.
- TTX/MIX**: Alternately selects Teletext ON, Double, Mix or OFF.
- PRE-CH**: Returns to the previous channel.
- VOL +**: Adjusts the volume.
- MUTE**: Turns the sound on/off.
- ∇ CH ▲**: Changes the current channel.
- CH LIST**: Launches the **Channel List**.
- MEDIA.P**: Displays **Media Play**.
- MENU**: Displays the main on-screen menu.
- GUIDE**: Displays the Electronic Programme Guide (EPG).
- TOOLS**: Quickly select frequently used functions.
- INFO**: Displays information about the current programme or content.
- ↵ (Enter)**: Selects or runs a focused item.
- ▲ ▼ ◀ ▶**: Moves the cursor, selects the on-screen menu items, and changes the values seen on the TV's menu.
- RETURN**: Returns to the previous menu or channel.
- EXIT**: Exits the menu.
- A, B, C, D**: Use these buttons according to the directions on the TV screen.
- E-MANUAL**: Displays the e-Manual guide.
- PIC SIZE**: Lets you select the **Picture Size**.
- AD/SUBT.**: Audio Description selection. (Not available in some locations) / Displays digital subtitles.
- : Stops playing content.
- ⏮ ⏪ ⏩ ⏭**: Use these buttons with specific features. Use these buttons according to the directions on the TV screen.

- The button names above may be differ from the actual names.

Installing batteries into the remote control (Battery size: AAA)

Match the polarities of the batteries to the symbols on the battery compartment.

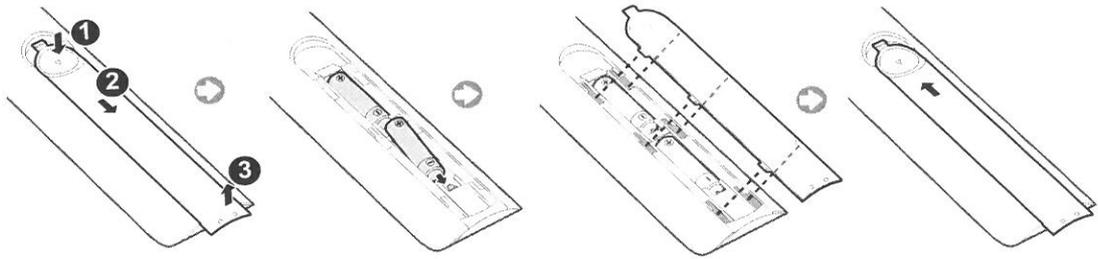

- The colour and shape of the remote may vary depending on the model.
- Use the remote control within 7 m of the TV.
- Bright lights may affect the performance of the remote control. Avoid using the remote control near special fluorescent lights or neon signs.

08 Getting more details.

For more information about the Samsung TV, refer to the **e-Manual**.

How to use the e-Manual




You can find instructions about your TV's features in the **e-Manual** in your TV. To use, press the **E-MANUAL** button on your remote. Move the cursor using the up/down/right/left buttons to highlight a category, then a topic, and then press the **ENTER** button. The **e-Manual** displays the page you want to see.

You can also access it through the menu:

- **MENU** → **Support** → **e-Manual** → **ENTER**
- To return to the **e-Manual** main menu, press the **E-MANUAL** button on the remote.

Screen Display

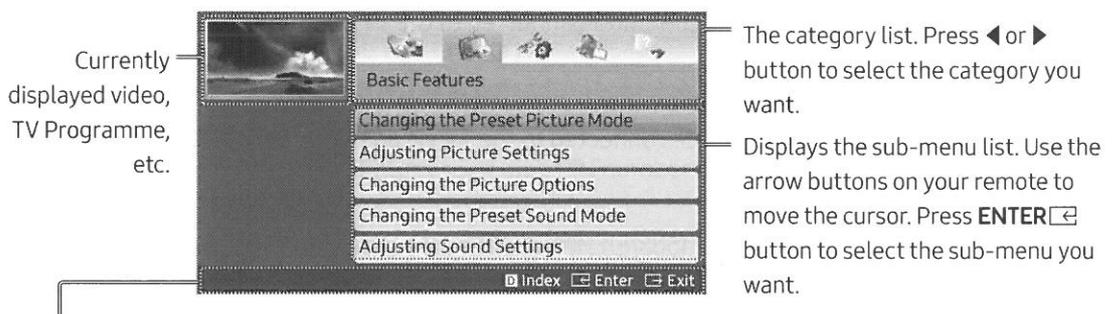

Operation Buttons

- **Index**: Displays the index screen.
 - Index available depending on the language.
- **Enter**: Selects a category or sub-menu.
- **Exit**: Exit the e-Manual.

<Viewing the Contents>

- **Try now**: Displays the OSD menu that corresponds to the topic. To return to the e-Manual screen, press the **E-MANUAL** button.
- **Home**: Moves to the e-Manual home screen.
- **Page**: Moves to previous or next page.
- **Zoom**: Magnifies a screen.
 - Press the **Zoom** button to magnify the screen. You can scroll through the magnified screen by using the **▲** or **▼** buttons. To return to the screen to normal size, press the **RETURN** button.

How to toggle between an e-Manual topic and the corresponding OSD menu(s).

- This function is not enabled in some menus.
- You cannot use the **Try now** function if the menu is not activated.

Method 1	Method 2
<ol style="list-style-type: none">1. If you want to use the menu that corresponds to an e-Manual topic, press the red button to select Try now.2. To return to the e-Manual screen, press the E-MANUAL button.	<ol style="list-style-type: none">1. Press the ENTER button when a topic is displayed. "Are you sure?" appears. Select Yes, and then press the ENTER button. The OSD window appears.2. To return to the e-Manual screen, press the E-MANUAL button.

How to search for a topic on the index page

- This function may not be supported depending on the language.
1. If you want to search a keyword, press the blue button to select **Index**.
 2. Press the ◀ or ▶ button to select a character order you want.
 3. Press the ▲ or ▼ button to select a keyword you want to see, and then press the **ENTER** button.
 4. You can view the corresponding e-Manual instruction screen.
 - To close the **Index** screen, press the **RETURN** button.

09 Troubleshooting and Maintenance

Troubleshooting

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, visit "www.samsung.com", then click on Support, or call Samsung customer service centre.

Picture Quality

- First of all, please perform the **Picture Test** and confirm that your TV is properly displaying test image. (go to **MENU - Support - Self Diagnosis - Picture Test**) If the test image is properly displayed, the poor picture may be caused by the source or signal.

The TV image does not look as good as it did in the store.

- If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.
- Cable/Satellite subscribers: Try digital stations from the channel line up.
- Aerial connection: Try HD stations after performing Auto tuning.
- Many HD channels are up scaled from SD (Standard Definition) contents.
- Adjust the Cable/Set top box video output resolution to 1080i or 720p.
- Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.

The picture is distorted: macro block, small block, dots, pixelization error.

- Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies.
- Low signal level or bad quality can cause picture distortion. This is not a TV issue.
- Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.

Colour is wrong or missing.

- If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.

There is poor colour or brightness.

- Adjust the **Picture** options in the TV menu. (go to **Picture Mode / Colour / Brightness / Sharpness**)
- Adjust **Energy Saving** option in the TV menu. (go to **MENU - System - Eco Solution - Energy Saving**)
- Try resetting the picture to view the default picture settings. (go to **MENU - Picture - Reset Picture**)

There is a dotted line on the edge of the screen.

- If the picture size is set to **Screen Fit**, change it to **16:9**.
- Change cable/satellite box resolution.

The picture is black and white.

- If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.

When changing channels, the picture freezes or is distorted or delayed.

- If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.
- Set the output resolution of the cable box to 1080i or 720p.

Sound Quality

- First of all, please perform the **Sound Test** to confirm that your TV audio is properly operating. (go to **MENU - Support - Self Diagnosis - Sound Test**)
- If the audio is ok, the sound problem may be caused by the source or signal.

There is no sound or the sound is too low at maximum volume.

- Please check the volume of the device (Cable/Sat Box, DVD, Blu-ray etc) connected to your TV.

The picture is good but there is no sound.

- Set the **Speaker Select** option to **TV Speaker** in the sound menu.
- If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV.
- If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV).
- If you are using a DVI to HDMI cable, a separate audio cable is required.
- Reboot the connected device by reconnecting the device's power cable.

The speakers are making an inappropriate noise.

- Check the cable connections. Make sure a video cable is not connected to an audio input.
- For aerial or cable connections, check the signal strength. Low signal level may cause sound distortion.

No Picture, No Video

The TV will not turn on.

- Make sure the AC power cord is securely plugged in to the wall outlet and the TV.
- Make sure the wall outlet is working.
- Try pressing the **POWER** button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "The remote control does not work" below.

The TV turns off automatically.

- Ensure the **Sleep Timer** is set to **Off** in the **Time** menu.
- If your PC is connected to the TV, check your PC power settings.
- Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
- **No Signal Power Off** turns off the TV if no signal has been received by the TV for a specified period time. **Auto Power Off** turns off the TV if there has been no user input in four hours.

There is no picture/video.

- Check cable connections (remove and reconnect all cables connected to the TV and external devices).
- Set your external device's (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.
- Make sure your connected devices are powered on.
- Be sure to select the TV's correct source by pressing the **SOURCE** button on the remote control.
- Reboot the connected device by reconnecting the device's power cable.

Aerial (Air/Cable) Connection (Cable: depending on the country)

The TV is not receiving all channels.

- Make sure the Aerial cable is connected securely.
- Please try **Setup** (Initial setup) to add available channels to the channel list. Go to **MENU - System - Setup** (Initial setup) and wait for all available channels to be stored.
- Verify the Aerial is positioned correctly.

The picture is distorted: macro block, small block, dots, pixelization error.

- Compression of video contents may cause picture distortion, especially on fast moving pictures such as sports and action movies.
- A low signal can cause picture distortion. This is not a TV issue.

Others

The picture will not display in full screen.

- HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.
- Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.
- Adjust the picture size options on your external device or TV to full screen.

The remote control does not work.

- Replace the remote control batteries with the poles (+/-) in the right direction.
- Clean the sensor's transmission window on the remote.
- Try pointing the remote directly at the TV from 5~6 feet away.

The cable/set top box remote control doesn't turn the TV on or off, or adjust the volume.

- Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for the SAMSUNG TV code.

A "Mode Not Supported" message appears.

- Check the supported resolution of the TV, and adjust the external device's output resolution accordingly.

There is a plastic smell from the TV.

- This smell is normal and will dissipate over time.

The TV Signal Information is unavailable in the Self Diagnosis Test menu.

- This function is only available with digital channels from an Aerial / RF / Coax connection.

TV is tilted to the right or left side.

- Remove the stand base from the TV and reassemble it.

There are difficulties assembling the stand base.

- Make sure the TV is placed on a flat surface. If you can not remove the screws from the TV, please use a magnetised screw driver.

The Broadcasting menu is grey out (unavailable).

- The **Broadcasting** menu is only available when the TV source is selected.

Your settings are lost after 5 minutes or every time the TV is turned off.

- If the TV is in the **Store Demo** mode, it will reset audio and picture settings every 5 minutes. If you want to change the settings from **Store Demo** mode to **Home Use**, press the **SOURCE** button to select **TV** mode, and go to **MENU - Support - Use Mode**.

You have intermittent loss of audio or video.

- Check the cable connections and reconnect them.
- Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.

Instructions for use

WASHER-DRYER

GB

English,1

IWDE 126

!  This symbol reminds you to read this instruction manual.

GB

Contents

Installation, 2-3-4-5-6-7

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details
Instructions for the fitter

Washer-dryer description, 8-9

Control panel
Leds

Starting and Programmes, 10

Briefly: how to start a programme
Programme table

Personalisations, 11

Setting the temperature
Setting the drying cycle
Functions

Detergents and laundry, 12

Detergent dispenser
Preparing your laundry
Special items

Precautions and advice, 13

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 14

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose


Troubleshooting, 15-16

Assistance, 17-18

 **INDESIT**

Washer-dryer description

Control panel

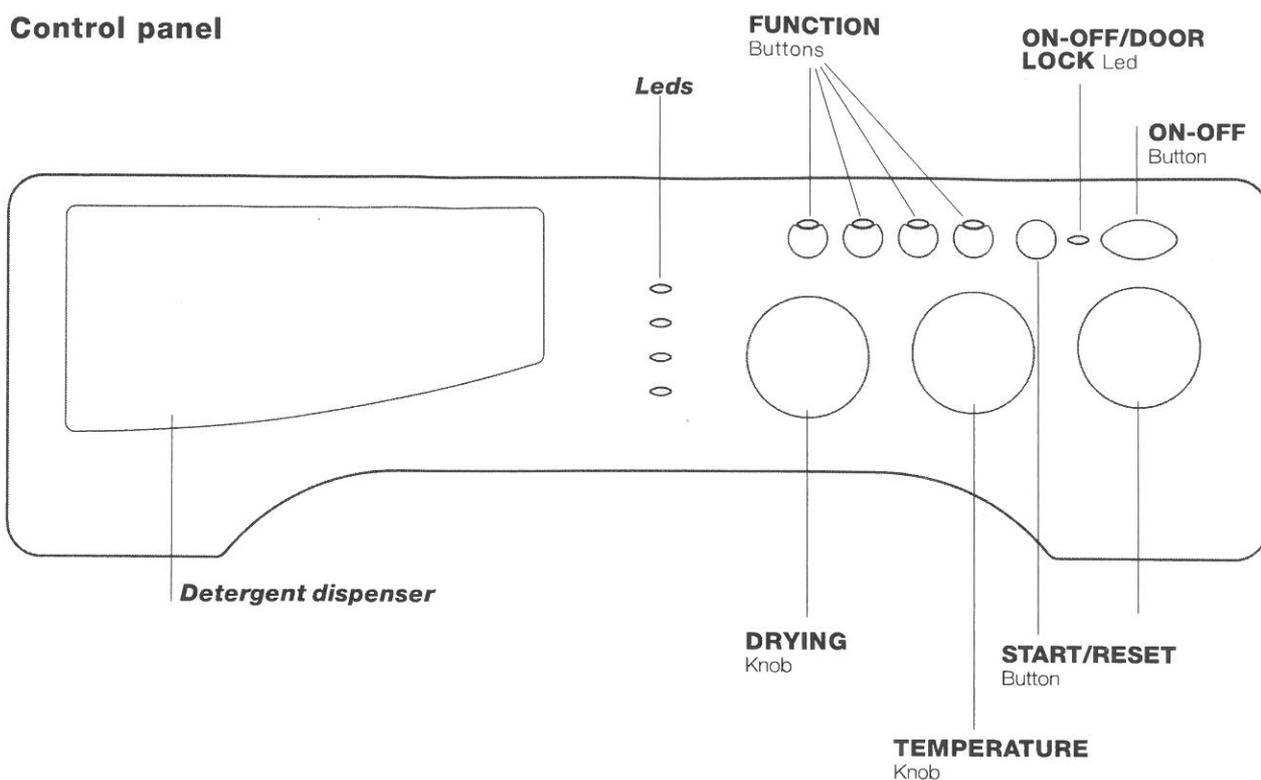

Detergent dispenser: to add detergent and fabric softener (see page 12).

LEDS: to find out which wash cycle phase is under way.

If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 9).

DRYING knob: to set the desired drying cycle (see page 11).

FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on.

TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 11).

START/RESET button: to start the programmes or cancel any incorrect settings.

ON-OFF/DOOR LOCK Led: to find out whether the Washer-dryer is on and if the appliance door can be opened (see page 9).

ON/OFF button: to turn the Washer-dryer on and off.

PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle.

Standby mode

This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.

Note: to avoid excessive vibrations, before every spin cycle the machine distributes the load in a uniform manner by continuously rotating the drum at a speed which is slightly faster than the normal washing speed. When, despite repeated attempts, the load is still not evenly distributed, the machine spins at a lower speed than the set frequency.

If the load is excessively unbalanced, the machine attempts to distribute it instead of spinning.

The balancing attempts may extend the total duration of the cycle, up to a maximum of 10 minutes.

Leds


The LEDS provide important information. This is what they can tell you:

Delay set:

If the Delay Timer function has been enabled (see page. 11), once you have started the programme, the LED corresponding to the delay set will begin to flash:



As time passes, the remaining delay will be displayed, and the corresponding LED will flash:

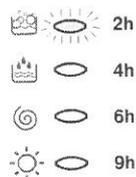

Once the set delay is complete, the flashing LED will turn off and the programme set will start.

Cycle phase under way:

During the wash cycle, the LEDs gradually illuminate on to indicate the cycle phase under way:



Note:

- during draining, the LED corresponding to the Spin cycle phase will be turned on.

- when the drying cycle is complete, the indicator light relative to phase  will flash, to indicate that the DRYING knob needs to be set back to the 0 setting.

Function buttons

The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated.

If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled.

If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled.

GB

ON-OFF/DOOR LOCK led

If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door.

! The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 15).

Starting and Programmes

Briefly: starting a programme

1. Switch the Washer-dryer on by pressing button . All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash.
2. Load your laundry into the washer-dryer and shut the appliance door.
3. Set the PROGRAMME knob to the programme required.
4. Set the wash temperature (see page 11).
5. Set the drying cycle if necessary (see page 11).

6. Add the detergent and any fabric softener (see page 12).
7. Start the programme by pressing the START/RESET button.
To cancel it, keep the START/RESET button pressed for at least 2 seconds.
8. When the programme is finished, the ON-OFF/DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. Turn the Washer-dryer off by pressing button .

Programme table

Type of fabric and degree of soil	Program.	Temperature	Drying Cycle	Detergent		Fabric softener	Cycle length (minutes)	Description of wash cycle
				pre-wash	wash			
Standard								
White prewash: Extremely soiled whites (sheets, tablecloths, etc.)	1	90°C	•	•	•	•	155	Pre-wash, wash cycle, rinse cycles, intermediate and final spin cycles
White Cotton: Extremely soiled whites (sheets, tablecloths, etc.)	2	90°C	•	-	•	•	150	Wash cycle, rinse cycles, intermediate and final spin cycles
White Cotton: Heavily soiled whites and fast colours	2	60°C	•	-	•	•	140	Wash cycle, rinse cycles, intermediate and final spin cycles
White Cotton: Heavily soiled whites and delicate colours	2	40°C	•	-	•	•	125	Wash cycle, rinse cycles, intermediate and final spin cycles
Colour Cotton: Slightly soiled whites and delicate colours (shirts, jumpers, etc.)	3	40°C	•	-	•	•	85	Wash cycle, rinse cycles, intermediate and final spin cycles
Easy care: Heavily soiled fast colours (baby linen, etc.)	4	50°C	•	-	•	•	83	Wash cycle, rinse cycles, anti-crease or delicate spin cycle
Easy care: Heavily soiled fast colours (baby linen, etc.)	4	40°C	•	-	•	•	70	Wash cycle, rinse cycles, anti-crease or delicate spin cycle
Wool	5	40°C	-	-	•	•	50	Wash cycle, rinse cycles, delicate spin cycle
Silk: Very delicate fabrics (curtains, silk, viscose, etc.)	6	30°C	-	-	•	•	45	Wash cycle, rinse cycles, anti-crease or draining cycle
Drying cotton	7	-	•	-	-	-	-	
Drying delicates	8	-	•	-	-	-	-	
Time 4 you								
Flesh Clean: Heavily soiled whites and fast colours	9	60°C	-	-	•	•	60	Wash cycle, rinse cycles, intermediate and final spin cycles
Flesh Nylon: Delicate colours (all types of slightly soiled garments)	10	40°C	-	-	•	•	40	Wash cycle, rinse cycles, delicate spin cycle
Daily: Delicate colours (all types of slightly soiled garments)	11	30°C	•	-	•	•	30	Wash cycle, rinse cycles and delicate spin cycle
Sport								
Sports Shoes (MAX. 2 pairs)	12	30°C	-	-	•	•	50	Cold wash (without detergents), wash cycle, rinse cycles, and delicate spin cycle
Special Sport: Fabrics for sportswear (Tracksuits, shorts, etc.)	13	30°C	-	-	•	•	60	Wash cycle, rinse cycles, intermediate and final spin cycles
PARTIAL PROGRAMMES								
Rinse		-	•	-	-	•	-	Rinse cycles and spin cycle
Spin		-	•	-	-	-	-	Draining and spin cycle
Drain		-	-	-	-	-	-	Drain

Notes

- For programme 9, we advise against exceeding a wash load of 3.5 kg.
- For programme 13 we advise against exceeding a wash load of 2 kg.
- For the anti-crease function: see Easy iron, *opposite page*. The information contained in the table is purely indicative.

Special programme

Daily (programme 11 for Synthetics) is designed to wash lightly soiled garments in a short amount of time: it only lasts 30 minutes and allows you to save on both time and energy. By setting this programme (11 at 30°C), you can wash different fabrics together (except for woollen and silk items), with a maximum load of 3 kg.

We recommend the use of liquid detergent.

Setting the temperature

Turn the TEMPERATURE knob to set the wash temperature (see Programme table on page 10). The temperature can be lowered, or even set to a cold wash (❄).

Set the drying cycle

Turn the DRYING knob to set the desired drying type. Two options are available:

A - Based on time: From 40 minutes to 180.

B - Based on the damp level of the dry clothes:

Iron : slightly damp clothes, easy to iron.

Hanger : dry clothes to put away.

Cupboard : very dry clothes, recommended for towelling and bathrobes.

A cooling stage is foreseen at the end of the drying cycle.

If your laundry load to wash and dry is exceptionally in excess of the maximum load foreseen (see table opposite), perform the wash cycle, and when the programme is complete, divide up the garments and put part of them back in the drum. Now follow the instructions provided for a **dry only** cycle. Repeat this procedure for the remainder of the load.

Dry only

Turn the PROGRAMME knob to one of the drying settings (7-8) depending on the type of fabric, then select the desired drying type using the DRYING knob.

Important: - A spin cycle is carried out during the drying if you have set a cotton programme and a level of dryness (Cupboard , Hanger , Iron).

- For cotton loads of less than 1 Kg, use the drying programme designed for delicate fabrics.

Functions

To enable a function:

1. press the button corresponding to the desired function, according to the table below;
2. the function is enabled when the corresponding button is illuminated.

Note: The rapid flashing of the button indicates that the corresponding function cannot be selected for the programme set.

Table of drying times

The data contained in the table are purely indicative.

Fabric type	Load type	Max. load (kg)	Cupboard	Hanger	Iron
Cotton, Linen	Clothing of different sizes	5	180	170	140
Cotton	Terry towels	5	180	170	140
Terital, Cotton	Sheets, Shirts	2,5	140	120	100
Acrylics	Pyjamas, socks, etc.	1	70	65	60
Nylon	Slips, tights, stockings, etc.	1	70	65	60


Function	Effect	Comments	Enabled with programmes:
Delay Timer	Delays the start of the wash by up to 9 hours.	Press the button repeatedly until the LED corresponding to the desired delay is turned on. The fifth time the button is pressed, the function will be disabled. N.B.: Once you have pressed the Start/Reset button, the delay can only be decreased if you wish to modify it.	All
Easy iron	This option reduces the amount of creasing on fabrics, making them easier to iron.	When this function is set, programmes 4, 6 will end with the laundry left to soak (Anti-crease) and the Rinse cycle phase LED will flash. - to conclude the cycle, press the START/RESET button; - to run the draining cycle alone, set the knob to the relative symbol and press the START/RESET button. <i>If you also want to run the drying cycle, this button is enabled only if combined with level (Iron).</i>	3, 4, 6, 9, 10, Rinse cycle.
Extra Rinse	Increases the efficiency of the rinse.	Recommended when the appliance has a full load or with large quantities of detergent.	1, 2, 3, 4, 9, 10, 12, 13, Rinse cycle.
1200-600	Reduces the spin speed.		All programmes except for 6, 7, 8 and draining.

Detergents and laundry

GB

Detergent dispenser

Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

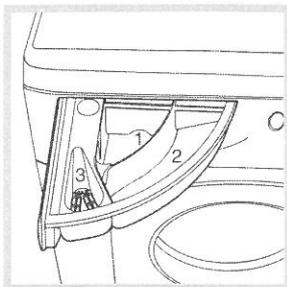

Open up the detergent dispenser and pour in the detergent and fabric softener, as follows.

compartment 1: Detergent for pre-wash (powder)

compartment 2: Detergent for the wash cycle (powder or liquid)

Liquid detergent should only be poured in immediately prior to the wash cycle start.

compartment 3: Additives (fabric softeners, etc.)

The fabric softener should not overflow from the grid.

! Do not use hand wash detergent because it may form too much foam.

Preparing your laundry

- Divide your laundry according to:
 - the type of fabric/the symbol on the label.
 - the colours: separate coloured garments from whites.
- Empty all pockets and check for loose buttons.
- Do not exceed the weight limits stated below, which refer to the weight when dry:
 - Sturdy fabrics: max 6 kg
 - Synthetic fabrics: max 2.5 kg
 - Delicate fabrics: max 2 kg
 - Wool: max 1.5 kg

How much does your laundry weigh?

- 1 sheet 400-500 g
- 1 pillow case 150-200 g
- 1 tablecloth 400-500 g
- 1 bathrobe 900-1200 g
- 1 towel 150-250 g

Special items

Curtains: fold curtains and place them in a pillow case or mesh bag. Wash them separately without exceeding half the appliance load. Use programme 6 which excludes the spin cycle automatically.

Quilted coats and windbreakers: if they are padded with goose or duck down, they can be machine-washed. Turn the garments inside out and load a maximum of 2-3 kg, repeating the rinse cycle once or twice and using the delicate spin cycle.

Wool: for best results, use a specific detergent, taking care not to exceed a load of 1.5 kg.

Your Washer-dryer could fail to work. Before calling for Assistance (see page 16), make sure the problem can't easily be solved by consulting the following list.

GB

Problem

The machine does not switch on.

The wash cycle does not start.

The machine does not dry.

The clothes are too hot when the drying cycle is finished.

The machine does not fill with water or The first wash cycle stage indicator light flashes.

The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash.

The machine does not drain or spin.

The programme takes too long.

The machine vibrates a lot during the spin cycle.

Possible causes/Solution:

- The appliance is not plugged into the socket fully, or not enough to make contact.
- There is no power to the socket, or the fuse has blown in the mains plug.
- The door is not closed properly.
- The 'ON/OFF' button has not been pressed.
- The 'START/RESET' button has not been pressed.
- The water tap has not been turned on to allow water to flow into the machine.
- A delayed start has been set.
- Check the 2 sections above.
- The 'DRY' button has been pressed to exclude drying.
- A cooling-down period is always added to the end of each drying cycle. If the clothes appear too hot to handle leave the door open to allow to cool further before removing from the machine.
- The water inlet hose is kinked.
- The water inlet hose is not connected to the water supply.
- The water pressure is too low.
- The water tap has not been turned on to allow water to flow into the machine.
- There is no water supply to the house.
- The inlet valve filter is blocked.
- The 'START/RESET' button has not been pressed.
- The top of the drain hose is too low - It must be fitted at a height between 65 and 100 cm from the floor.
- The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose.
- The end of the drain hose has been pushed too far down the standpipe, the 'U' bracket should be fitted 100 mm from the end of the drain hose.
- The Pump filter is blocked.
- The "Easy iron" function is enabled: to complete the programme, press the START/RESET button (see page 11).
- The drain hose is kinked.
- New Installation - The blanking cap or spigot has not been removed if connected under a sink.
- The drain hose or sink trap is blocked.
- Programme times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the programme times accordingly (see 'The machine wont spin properly' below) - (Most Common Cause!).
- The feet have not been adjusted, enabling the machine to rock.
- New Installation - Either the Transit Bolts including the plastic spacers, or the Polystyrene Packaging have not been removed when installing the machine.
- The machine is trapped between cabinets and/or walls.
- The load is in a slight out of balance condition and machine is spinning, but at a lower speed.

The machine is noisy.

- There will always be some motor, pump and drum noise during spin.

The machine wont spin properly.

- Out of Balance detected when attempting to go into a spin cycle - If this happens the machine will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds - This will increase the programme time accordingly. This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg duvet, quilt, etc). - Try the programme again using a different load.

The machine leaks from the dispenser.

- The dispenser drawer is blocked with detergent and requires cleaning.
- The water pressure is too high and requires turning down - turn down the tap on the water supply pipe slightly and try again.
- The machine is tilting forwards - It must be level when in its final position.

The machine leaks (other than dispenser).

- The fill hose is loose, check both the cabinet and tap ends.
- The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer.
- The drain hose is not fixed in properly.

The indicator lights on the console are flashing rapidly.

- Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists contact the Technical Assistance Service.

The machine smells.

- The machine requires a service wash. Run a 90 degree wash cycle with detergent and no laundry.

The machine door cannot be opened.

- The door will not open until the door lock indicator light goes out shortly after the program has finished.

Door Seal damaged at the bottom.

- The door seal has drainage holes at the bottom - This is normal.

The water level is too low when the machine is washing.

- The water level is correct if it can be seen at the bottom of the door.

There is too much foam.

- The detergent is not suitable for machine washing (it should display the text 'for washing machines' or 'hand and machine wash' or the like).

After completing the programme, or before starting a programme, the machine has turned itself off (no lights).

- To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected.

General.

- Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress). Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong!

Remember, you will be charged for a service call for problems caused by incorrect installation, as listed above.

Not emptying contents from pockets may cause pump or drain blockages, or may damage the machine.

Do not wash items which do not have a wash label, or wash items that are not intended as machine washable.